 
 
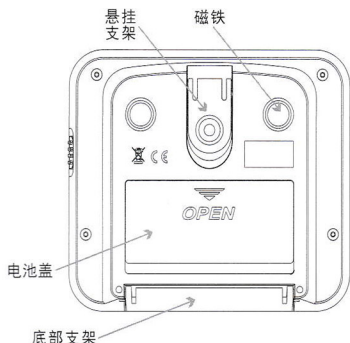 


计时器说明书

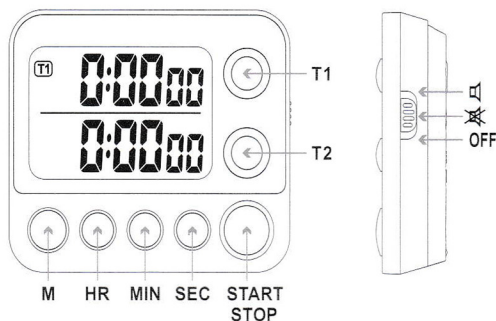

- T1键-----切换到控制第一组计时器T1。
- T2键-----切换到控制第二组计时器T2。
- M键-----设置记忆时间, 返回记忆时间。
- HR键-----调整“时”数值。
- MIN键-----调整“分”数值。
- SEC键-----调整“秒”数值。
- START/STOP键-----开始或暂停计时。

T1处在控制状态

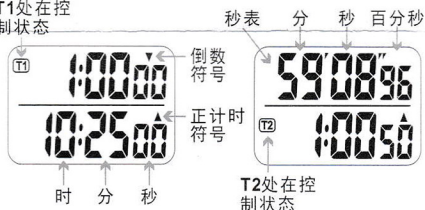

定时器的使用->>

- * 按T1或T2键切换到您想要使用的定时器T1或T2。

设置倒数时间：

1. 按HR键可上调“时”数值，按住不放可快速上调。
 2. 按MIN键可上调“分”数值，按住不放可快速上调。
 3. 按SEC键可上调“秒”数值，按住不放可快速上调。
 4. 按住HR和MIN键可将时间清零。
- * 最长可以设置99小时59分59秒的倒数时间。

开始倒数

- * 设定好时间后，按一下START/STOP键开始倒数，倒数字号“▼”在闪烁；再按一下可以暂停倒数，倒数字号“▼”停止闪烁；再按一下可以继续倒数。
- * 倒数运行过程中，您所使用的定时器相应的按键指示灯（绿灯）会闪烁。

倒数结束后

- * 当定时器时间倒数至零，将出现正计符号“▲”并闪烁、时间从零开始正计时、提示音会响一分钟（如果用波动开关开启了提示音）、相应的指示灯（红灯）闪烁一分钟。
- * 按一下START/STOP键可立即返回倒数前设定好的

设置记忆时间：

在使用过程中，您可能要反复使用某个时间设置，那么请将这个时间设置为记忆时间，只要设置一次便可方便快捷地反复使用这个时间设置。设置方法如下：

1. 在时间停止计时的状态下，按住M键直到数值在闪烁。
 2. 按HR键可上调“时”数值，按住不放可快速上调。
 3. 按MIN键可上调“分”数值，按住不放可快速上调。
 4. 按SEC键可上调“秒”数值，按住不放可快速上调。
- * 按住HR和MIN键可将时间清零。
 - 5. 设置满意后按M键完成缺省时间的设置。
 - * 每当要使用这个记忆时间时，在停止计时状态下按一下M键即可调出您所设置的记忆时间，十分方便。

使用秒表->>

- * 按T1或T2键切换到您想要使用的计时器T1或T2。
- 1. 在暂停计时的状态下按住HR和MIN键将时间清零。
- 2. 按一下START/STOP键可立即开始秒表计时。
- * 一个小时以内的计时单位精确到百分秒，超过一个小时后精确到秒，最长可计时到99小时59分59秒。

控制提示音->>

把产品侧面的波动开关拨到相应的位置可以控制提示音开启或静音。

🔊 有声音 🔇 静音

如何放置本产品->>

 
- * 可以利用悬挂支架挂在墙上或其他可以悬挂的地方。
- * 打开支架可以将产品直立放在桌面上。
- * 本产品带有磁铁，可吸附在铁框、冰箱等金属表面。

如何更换电池->>


当电量不足时，显示画面会变暗或不清晰。电量不足时请及时更换新电池。

1. 用手按住电池盖，朝“▼”指的方向打开电池盖。
2. 取出旧电池，按正确的正负极方向，装上新电池。
3. 盖上电池盖。

User's Guide

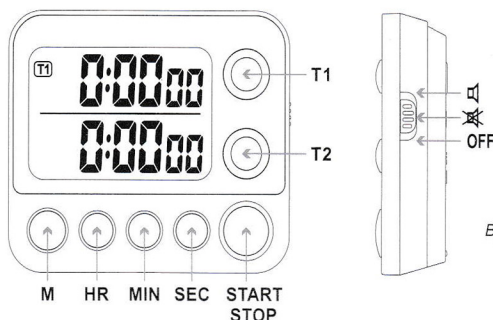

 - T1** button ---- To switch to control the first set timer T1.
T2 button ---- To switch to the control of the second set timer T2.
M button ---- To set the memory time, return to the memory time.
HR button ---- To adjust "hour" value.
MIN button ---- To adjust "minute" value.
SEC button ---- To adjust "second" value.
START / STOP button ---- To start or pause the timer.

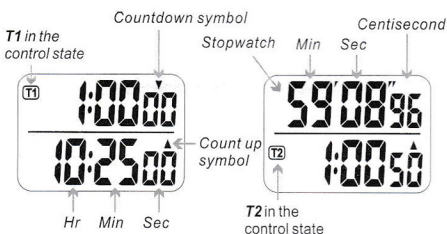

Timer Instructions - >>

* Press the **T1** or **T2** button to switch to **T1** or **T2** timer you want to use.

Set the countdown time:

- 1 Press the **HR** button to increase "hour" value, press and hold to increase quickly.
- 2 Press the **MIN** button to increase "minute" value, press and hold to increase quickly.
- 3 Press the **SEC** button to increase "second" value, press and hold to increase quickly.
- 4 Press the **HR** and **MIN** buttons to clear the timer.

* You can set up to 99 hours 59 minutes 59 seconds of the countdown time.

Start the countdown

* After setting the countdown time, press the **START / STOP** button to start the countdown, with the "▼" flashing; Press the **START / STOP** button again to pause countdown, with the "▼" stop flashing; Press the **START / STOP** button again to continue the countdown.

 
* When the countdown is in progress, the corresponding button lamp (green) of the timer you are using blinks.

After the end of the countdown

* When the timer counts down to zero, the count-up symbol "▲" flashes, the timer will count up from zero, and the alarm will sound for a minute (if the alarm is turned on using fluctuation switch), and the corresponding indicating lamp (red) will flash for a minute.

* Press the **START / STOP** button to return immediately to the set countdown time.

Hanging bracket Magnet

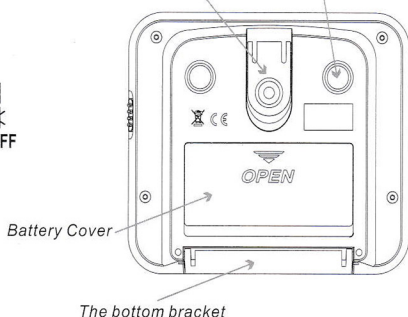

Set memory time:

You can quickly re-use a time setting as memory time.

Set as follows:

- 1 When the timer is paused, press and hold the **M** button until the value flashes.
- 2 Press the **HR** button to increase "hour" value, press and hold to increase quickly.
- 3 Press the **MIN** button to increase "minute" value, press and hold to increase quickly.
- 4 Press the **SEC** button to increase "second" value, press and hold to increase quickly.
- * Press the **HR** and **MIN** buttons to clear the timer.
- 5 Press the **M** button to finish the default time setting.

* Whenever you want to use the memory time, press the **M** button to bring up the memory time you set, when the timer is paused.

Use the stopwatch - >>

* Press the **T1** or **T2** button to switch to the **T1** or **T2** timer you want to use.

- 1 Press the **HR** and **MIN** buttons to clear the timer when the timer is paused.
- 2 Press the **START / STOP** button to start the stopwatch immediately.

* The timer is accurate to centisecond within one hour, and accurate to seconds after one hour. The timer counts up to 99 hours 59 minutes 59 seconds.

Control alarm - >>

You can switch the ripple switch to the appropriate position to turn on the sound or mute.

🔊 volume 🔇 Mute

How to place the product - >>

* You can use the hanging bracket to hang it on the wall or other places.

* The product can stand upright on the table with the bottom bracket unfolded.

* This product comes with a magnet, it can be attached onto the metal surface of the iron box or refrigerator.

How to replace the battery - >>

When the power is low, the display becomes dim or unclear.

Replace the battery when the battery power is low.

1 Hold and push the battery cover towards the direction indicated by "▼" to open the battery cover.

2 Remove the old battery, and put on a new battery according to the correct polarity direction.

3 Replace the battery cover.