

**按键功能说明:**

- “HR”键: 增加“时”数值。
- “MIN”键: 增加“分”数值。
- “SEC”键: 增加“秒”数值
- “CLEAR”键: 复位/清零
- 大音量
- 小音量
- “T1”键: 选定本组倒计时并控制它开始或暂停, 在设置清零后可以按一下它提取最后一次的数据
- “T2”键: 功能和“T1”的功能一样。
- “T3”键: 功能和“T1”的功能一样。
- “START/STOP”键: 控制正计时或倒计时的开始、暂停或停止; 在三组都设有数值时可同时开启3组计时。
- “ON/OFF”开机/关机

**开机/关机**

按住 ON/OFF 键约3秒开关机

**正计时的使用**

按“T1”键选定“T1”组,按“CLEAR”键清零后再按“START/STOP”键开启正计时,可按对应的“T1”键或“START/STOP”键暂停计时,计时暂停状态按“CLEAR”键清零。“T2”“T3”组与“T1”组操作一样,3组独立互不相干,可独立或同时运行。

**倒计时的使用**

- A. 设置倒计时时间
- 1、以第一组“T1”操作为例,按“T1”键选定“T1”组。
  - 2、按“HR”键增加“时”数值,按“MIN”键增加“分”数值,按“SEC”键增加秒数值。按住这三个键中的任意一键可快速增加其对应的数值。
  - 3、“T2”“T3”组的设置方法和“T1”组的设置方法一样。
- B. 开始倒计时
- 1、按“T1”,“T2”或“T3”键对应的组别开始倒数,倒数时按“T1”,“T2”或“T3”键对应的倒计时暂停,暂停后再按又继续倒数,倒数暂停时按“CLEAR”键可清零。
  - 2、倒计时清零后按“T1”,“T2”或“T3”可



- 恢复最后一次设定的记忆数值。
  - 3、当3组都同时设有数值时,按“START/STOP”同时开启3组倒计时。倒数开启后可按“START/STOP”同时暂停3组倒数计时,亦可按“T1”,“T2”或“T3”暂停对应组别。
- C. 倒计时结束
- 当倒计时结束时,产品会发出滴滴滴的声音,约1分钟,响铃的同时对应的组别数值闪动并开始正计时,显示屏上会出现符号
- “TIME, S Up”,可按任意键停止响铃及闪动。

**规格**

- ★ 正计时功能:最长可以进行99小时59分59秒的正计时
- ★ 倒计时功能:最长可以进行99小时59分59秒的倒计时。
- ★ 响铃声:1分钟。
- ★ 工作温度:0度至50度
- ★ 电池:2粒1.5V锂电池

**电源**

- A. 重要**
- ★ 注意若长期不使用本产品时,请取出电池
  - ★ 使电池远离小孩,万一被小孩吞食,请立即到医院救治
  - ★ 若电池泄漏液体,请立即将电池座抹干净并注意不要让它与你的皮肤直接接触。
  - ★ 在安装电池时,注意其正极(+)及负极(-)的方向必须正确。
  - ★ 本产品电池为非充电电池,切勿为其充电
  - ★ 请每年至少更换电池一次,即使目前使用中的电池还有电亦需更换。
  - ★ 若计时变暗或停止,表示电池电量不足,请尽快更换电池。
  - ★ 本产品的原装电池的电量会在存放和运送期间不断消耗
- B. 电池的更换**
1. 向下按电池盖子的“ ”部位,打开电池盖即可将其取下
  2. 取出产品电池,换上两粒新的1.5V锂电池。
- ★ 注意其正极(+)及负极(-)的方向必须正确
  - ★ 必须将2粒电池同时更换。
3. 合上电池盖。

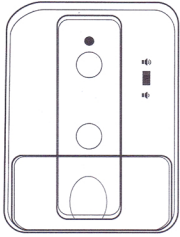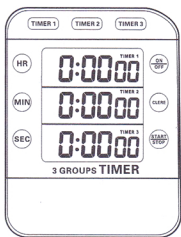

- ★Turn on or turn off the timer**
- ON/OFF: Press “ON/OFF” button for about 3 seconds to turn on / off the timer Press the timer button (TIMER 1 to TIMER3) to select a time, Press the “CLEAR” button clears the timer setting to zero.

- ★Count down setting**
- a. Press “TIMER1/TIMER2/TIMER3” switch to timer mode(if there are some memories, Press the “CLEAR” button clears the timer setting to zero)
  - b. Press the “HR” button to set the hour, “MIN” to set minutes, and “SEC” to set seconds. The Maximum start time setting is 99 hours, 59 minutes, 59 seconds. Press the “CLEAR” button clears the timer setting to all zeros.
  - c. Press the “START/STOP” button to start a countdown operation.
  - d. When countdown time goes off, the timer wil automatically count up with beeping. Press any button to stop the alarm.

You can have all three timing performing count down operations simultaneous

After all “TIMER1/TIMER2/TIMER3” timer channels setting, Press “START/STOP” button to count down all these three timing. I

- ★Count up setting**
- a. Press “TIMER1/TIMER2/TIMER3” switch to timer mode
  - b. Press “START/STOP” button to start a count up operation
  - c. Press “TIMER1/TIMER2/TIMER3” enter to the right channel, Press “START/STOP” button to pause or restart

Note: You can not have all three timing performing count up operations simultaneous

- ★Adjustable alarm volume**
- Slide the button on back to adjust the alarm volume to high or low.

Note: for batteries energy saving, we did not remove the insulating tape on the batteries before shipping. Please remove it and install them correctly.